

# UPUTE ZA SASTAVLJANJE KB-S009




1. Spojite jedan bočni rukohvat na spust i učvrstite vijcima.



2. Podignite spust na bok i spojite donji dio spusta na bočni rukohvat i učvrstite vijkom. Spojite drugi rukohvat i učvrstite vijcima.



3. Spojite bočnu stranicu s rukohvatom na spust i učvrstite vijcima. Spojite dvije stepenice na bočnu stranicu i učvrstite vijcima.

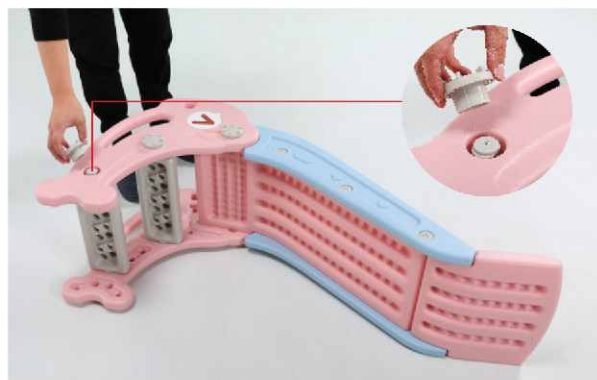

4. Spojite drugu bočnu stranicu i učvrstite vijcima.



5. Prije uporabe uvjerite se da je sve ispravno montirano i dobro učvršćeno vijcima